

## Auto Feeder Operation Instruction Corrections

### Button Description:

Mode button: The MODE button is used to move between the local time and feeding times, and also to skip between hours, minutes and feeding repetitions.

Set button: The SET button is used to select the respectively displayed times for adjustment, and also to install the time adjustments.

Adjust button: The ADJUST button is used to change the times (hours/minutes) and the feeding repetitions. Press the ADJUST button to scroll through the selected items.

### Setting the Feeding Times:

Press the MODE button, 0'0:00 will be displayed.

Press the SET button, the hours will blink.

Press the ADJUST button to set the hour of the first feeding time.

Press the MODE button and the minutes will blink.

Press the ADJUST button to set the minutes of the first feeding time.

Press the MODE button again and the 1 will blink (or 2, 3, 4 on additional feeding times).

Press the ADJUST button and an arrow will appear 1 ↓, this indicates a single feed at this time.

Press the ADJUST button again and a second arrow will appear 1 ↓ ↓, this indicates a double feed at this time.  
(each feeding will be separated by a 60 second interval).

By pressing the ADJUST button again both arrows will disappear, this indicates that no feeds are programmed at this feeding time.

When the first feed has been entered and the feeding times and repetitions are correct, press the SET button and it will be stored and complete.

### Programming Additional feedings:

To programme additional feeds press the MODE button to select the feeding programme number required. There are 4 programmable feeding times.

Now follow the earlier instructions for setting the feeding times.