


Insight LED

Lighting auto timer

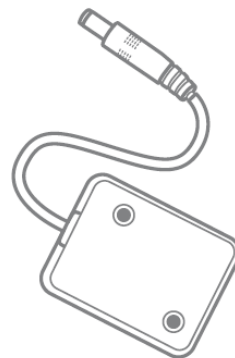

How to install your lighting auto timer

- a. Use a small Phillips screw driver to remove the cable cover (11) – top left hand side of the inside of the Insight LED hood (See Image 2).
- b. Unplug the Bright White LED light plug (3) (top socket) from the LED Power Hub (9).
- c. Push fit the auto timer (19) onto the two locator pins moulded into the hood (See image 2).
- d. Plug the Bright White LED light (3) into the socket in the auto timer (19).
- e. Plug the auto timer cable into the LED Power Hub (9) top socket (See image 3).
- f. Fit the cable cover and screw back into position.
- g. Your auto timer will automatically start once the white LED button (14) (under feeding flap) is switched on; it will be on for 10 hours then switch off for 14 hours automatically – this process will repeat until the white light button is switched off manually.



Guarantee

This product is guaranteed against defects in material and workmanship for 12 months from the date of purchase, under normal usage.

The GUARANTEE DOES NOT APPLY in case of improper use, negligence, lack of maintenance or accidental damage. If the auto timer fails due to a manufacturing fault within this period it will either be replaced free of charge or repaired. Liability is limited to replacement of the faulty product only no other costs will be reimbursed.

This guarantee is not transferable and does not affect your statutory rights. This guarantee does not confer any rights other than those expressly set out above.



You can help protect the environment. Please remember to respect the local regulations: hand in non-working electrical equipment to an appropriate waste disposal centre.

Consumer Advice contact details

Interpet Ltd.
Consumer Advice Department
Vincent Lane, Dorking, Surrey RH4 3YX
Fax: 01306 876712
E-mail: customercare@interpet.co.uk
www.interpet.co.uk