



This product must not be disposed of with household waste. This product has to be disposed of at an authorised place for recycling of electrical and electronic appliances.

Guarantee service includes repair or replacement direct, indirect, incidental, consequential or special, including loss of livestock, arising from damage, including loss of livestock, arising from a defect in this product.

This guarantee does not affect your statutory rights. In the event of a defect within the stated warranty period, the manufacturer will repair or replace free of charge, to the point of purchase.

In the case of a defect within the stated warranty period, or operations outside of the product specifications, misuse, improper or inadvertent maintenance, not apply to any unauthorized modifications or in accordance with the instructions enclosed. It does not apply to any normal use and operation of the heater, during normal use and operation of the heater, the guarantee covers only any defects caused by the date of purchase.

This product is guaranteed as free from defects in materials and workmanship for a period of 1 year from the date of purchase.

GUARANTEE



Interpet has applied over 65 years of aquatic experience to ensure every element of the design of this product has been carefully considered to help you enjoy aquarium keeping.

Email: customercare@interpet.co.uk

Interpet Ltd, Vincent Lane, Dorking, Surrey, RH4 3YX, United Kingdom
facebook.com/interpet

www.interpet.co.uk

- Only to be used indoor – but not in a bathroom.
- The maximum operating depth of the appliance is 1.2m.
- Do not attempt to repair or make any modifications to the appliance.
- Be sure that when the appliance is in operation it remains fully submerged.
- Be sure to let the appliance cool down before maidintenance and unplug it from the wall socket.
- Keep the appliance and its cord out of the reach of children less than 8 years of age.
- Unplug or switch off all appliances in the aquarium before carrying out maintenance.
- **WARNING:** Unplug the appliance and its cord before scrapping.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children shall not play with the appliance in a safe way and understand the hazards involved.
- Sensors or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance or its function.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and understanding if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Only to be used indoor – but not in a bathroom.
- The maximum operating depth of the appliance is 1.2m.
- Do not attempt to repair or make any modifications to the appliance.
- Be sure that when the appliance is in operation it remains fully submerged.
- Be sure to let the appliance cool down before maidintenance and unplug it from the wall socket.
- Keep the appliance and its cord out of the reach of children less than 8 years of age.
- Unplug or switch off all appliances in the aquarium before carrying out maintenance.
- **WARNING:** Unplug the appliance and its cord before scrapping.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children shall not play with the appliance in a safe way and understand the hazards involved.
- Sensors or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance or its function.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and understanding if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

IMPORTANT SAFEGUARDS



Aquatherm Heater



Quick Start Guide

25, 50, 100, 150, 200 & 300W

IMPORTANT SAFETY INSTRUCTIONS

GETTING TO KNOW YOUR HEATER



Part	Part Description
1	Temperature dial
2	Temperature Indicator
3	On/Off light
4	Correct position of suckers and clips
5	Metal heating element

Size	For Aquarium size		Aquarium length		Power
	Litres	Gallons	cm	Inches	
25w	4-25	1-5.5	26	9	25
50w	23-45	5-10	46	18	50
100w	45-90	10-20	61	24	100
150w	68-135	15-30	76	30	150
200w	90-180	20-40	91	36	200
300w	135-270	30-60	122	48	300

MAINTENANCE


- Switch off and unplug the heater, then allow to cool for 10 minutes before removing from the aquarium.
- Clean the heater using fresh, clean water.
- Reinstall the heater into the aquarium at the 45° angle – ensuring the heater is positioned below the minimum water line.
- Then turn the power for the heater back on.

INSTALLATION

Set the temperature using the dial on the top of the heater. For tropical species it should be set between 23°C and 26°C.



Using the suckers provided, install the heater into the aquarium in an area of high flow and ensuring it is positioned below the minimum water line of the aquarium. Position the heater at a 45° angle to get the best heating affect.

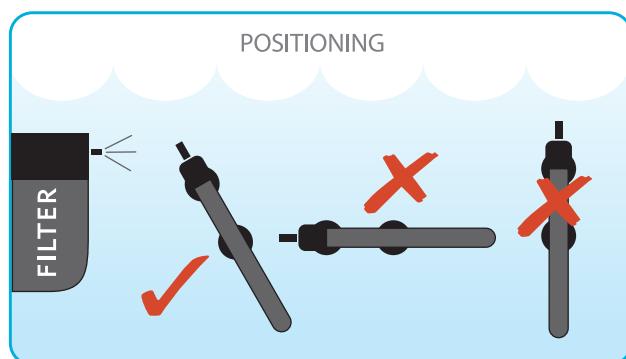


Once the aquarium is filled with water, turn the heater on at the power supply. The red indicator light will turn on to show the heater is on, and will then turn off once the water has reached your set temperature.

Important:

This heater is designed to be used fully submerged, to a maximum depth of 1.2m.

To prevent any drips of water from entering the electrical socket, a drip loop for the heater cable should be created.

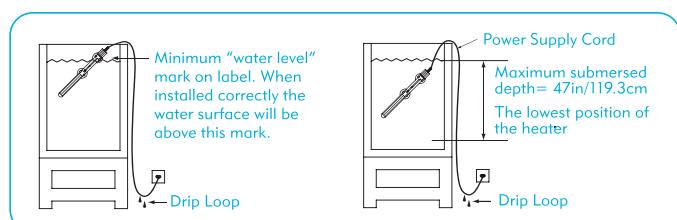

Top tip...

...a small amount of condensation might appear on the inside of the glass, this is normal and won't effect the performance of the heater.

SAVE THESE INSTRUCTIONS FOR FUTURE USE