




Aqua Cube LED Instructions

Installing Replacement Coir Tech Cartridges into the Filter

1. Remove the plastic holster from the Aqua Cube filter and slide out the old CF1 cartridge and discard of responsibly.
2. Insert the new Bio CF1 Coir Tech Front Cartridge into the plastic holster and reinsert into the filter. As per the images below.

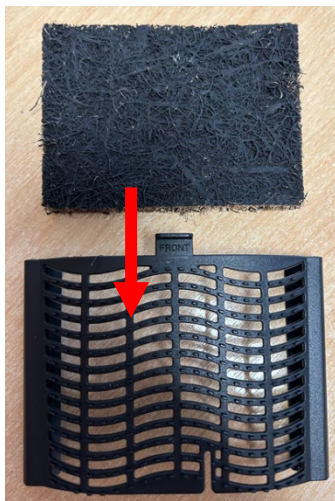

Top tip...submerge the Coir Tech cartridges under water for 5 seconds to expel any trapped air before inserting into the CF filter.

3. An additional back cartridge is supplied with the Bio CF1 service pack, this is for the Bio CF1 filter, but this can be inserted behind the front cartridge as additional carbon filtration.

See image below for installation:



4. Replace the Coir Tech cartridges every month to keep your aquarium healthy, clean and clear.