




Installing Coir Tech Cartridges into the CF Mini

Instructions

1. Lift the clear lid to the fully open position.
2. Remove the old CF cartridge and dispose of responsibly.



3. Open new Coir Tech cartridges, submerge the Coir Tech cartridges under water for 5 seconds to expel any trapped air before inserting into the CF Mini filter.
4. Then insert the new (BACK) and (FRONT) Coir Tech cartridges into the front of the ceramic cartridge as seen below for a tight fit.

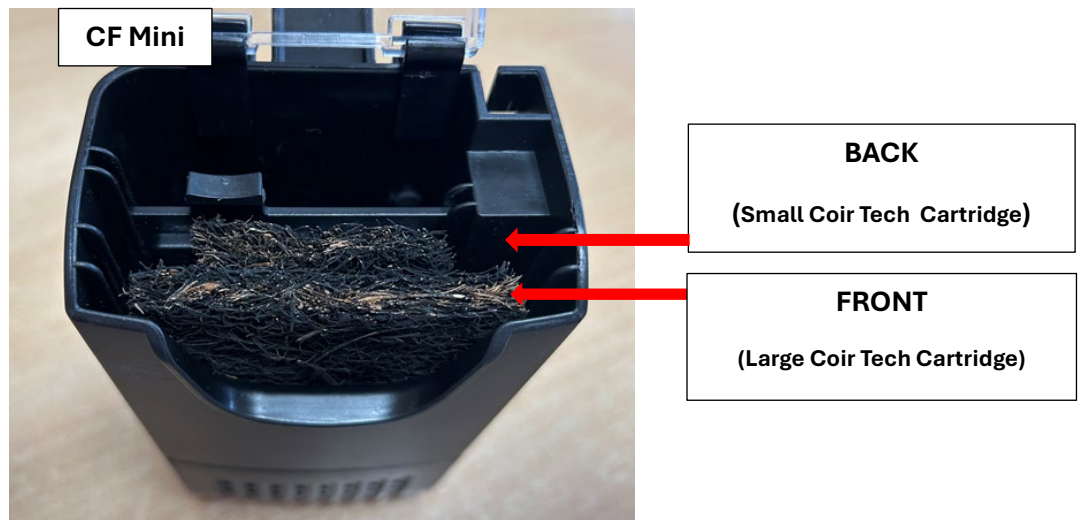

5. Then close the lid to complete the installation.
6. Replace the Coir Tech cartridges every month to keep your aquarium healthy, clean and clear.