


Installing CF1,2 & 3 Coir Tech™ Cartridges with CF Clips


1. Remove the old CF cartridge and dispose of responsibly.
2. Remove the bio holster from the CF filter and slide out the old Algaway pad and discard.
3. Open the new Coir Tech™ Cartridges, then submerge the Coir Tech™ cartridges under water for 5 seconds to expel any trapped air.
4. Then insert the new large Coir Tech™ cartridge into the Algaway CF bio holster, then reinsert into the filter as per the images below.



5. Then remove the ceramic cartridge and using the clips provided, attach the back (Small) Coir Tech™ cartridge onto the ceramic cartridge. Reuse the clips each month, made from recycled materials. See images below for best installation with clips for the CF1,2 & 3.

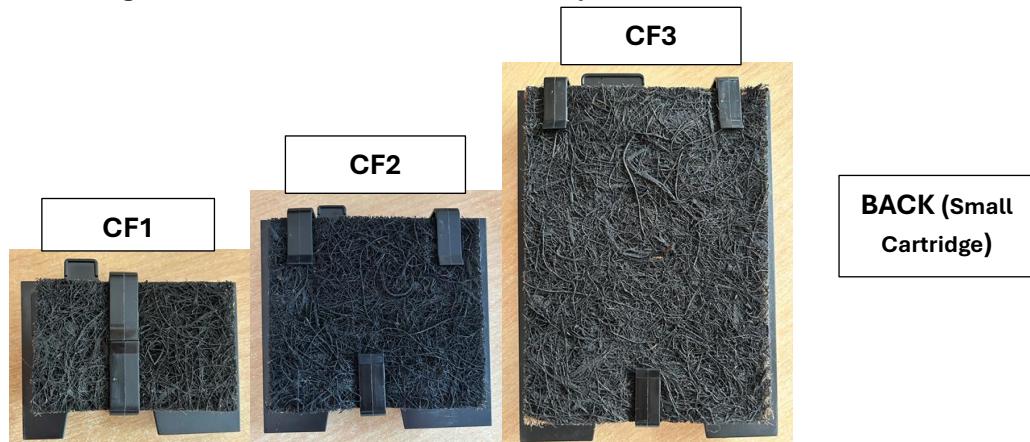

6. Then reinsert the cartridge into the CF filter as per the images below:

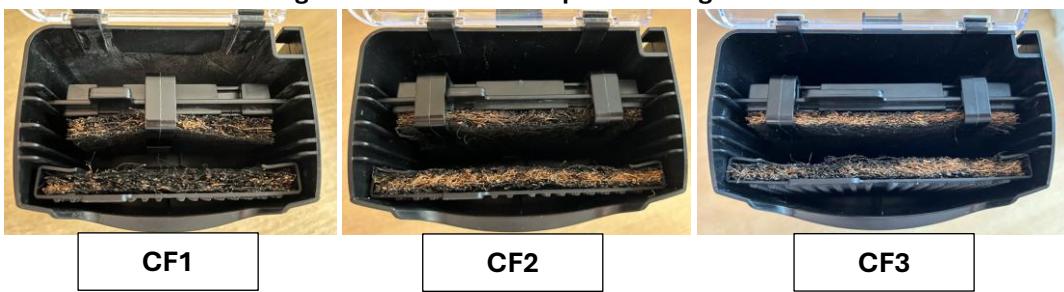

7. Then close the lid to complete the installation of the CF Filter.
8. Replace the Coir Tech™ cartridges every month to keep your aquarium healthy, clean and clear.